

Speaker Phone



VS-6104-S(A)
VS-6104-S-EW(A)

QIG
V 1.00

1 Overview

This phone is a full-feature telephone that provides voice communication. Read this QIG carefully to learn how to operate this product and take advantage of its features.

Package Contents

When unpacking the phone, ensure all the following items are present and undamaged. If anything appears to be missing or broken, contact your dealer for a replacement.

1. Base Unit
2. Short Line Cord
3. Quick Installation Guide (This document)
4. Emergency wire (VS-9104-S-EW, VS-6104-S-EW Only)

2 Product Description

The following contains important information to help you familiarize with the functions of the phone.

Front View



1. Handset keys

	Name	Description
1	Service dial keys	Press to dial the preset number.
5	Speaker key	Press to answer/end a phone call
6	Alphanumeric keys	Press these keys to enter phone numbers or texts.
7	Function keys	
	Mute	Press to mute microphone
	VOLUME up/down	Press to increase or decrease the volume of the ringer tone, speakerphone.

3 Operations

Answering a Call

An incoming call is indicated by a ringing tone. You can answer the call by doing following:

- Press the **SPEAKER** key on the base to answer the call.

Making a Call

- Press the **SPEAKER** key
- Enter the telephone number with the alphanumerical keypad and the call will start.
- Press the **SPEAKER** key again to end a call

Using the service dial keys

You can use the 4 pre-assigned service dial keys, to configure the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

To call a number using speed dialing, follow the steps below:

- Press the **SPEAKER** key
- Press the service dial key that has been pre-assigned to the phone number and the call will start.
- Press the **SPEAKER** key again to end a call

Mute a Call

You may need to mute MIC temporarily during a call, do one of the following:

- Press the **MUTE** key on the phone to mute the microphone, MUTE LED turn on.
- Press the **MUTE** key again to resume microphone, MUTE LED turn off.

4 Support

For technological support, please email to support@aeicommunication.com.